
INSTALLATION GUIDE LIFESPAN closets^M



CONTENTS

* It is recommended to put Unit together in the order listed below for best results. Not all Units have all items listed below.


- 3. Your Design
- 4. Recommended Tools
- 5. Hardware
- 6. Preparing Your Wall
- 7. Wedgerail
- 8. Partitions
- 9. Back Panels
- 10. Wedgerail Covers
- 11. F-Rail & Shelves
- 12. Bridge Shelves & H-Rail
- 13. Shoe Shelves & Hanging Rods
- 14. Drawer Assembly and Installation
- 15. Drawer Assembly and Installation Continued
- 16. Baskets
- 17. Pants Rack
- 18. Ironing Board
- 19. Accessories
- 20. Doors
- 21. Corner Units
- 22. Braces
- 23. Bottom Shelves & Partition Feet
- 24. Toe-Kick
- 25. Toe-Kick Continued
- 26. Top Molding
- 27. Trouble Shooting
- 28. Warranty

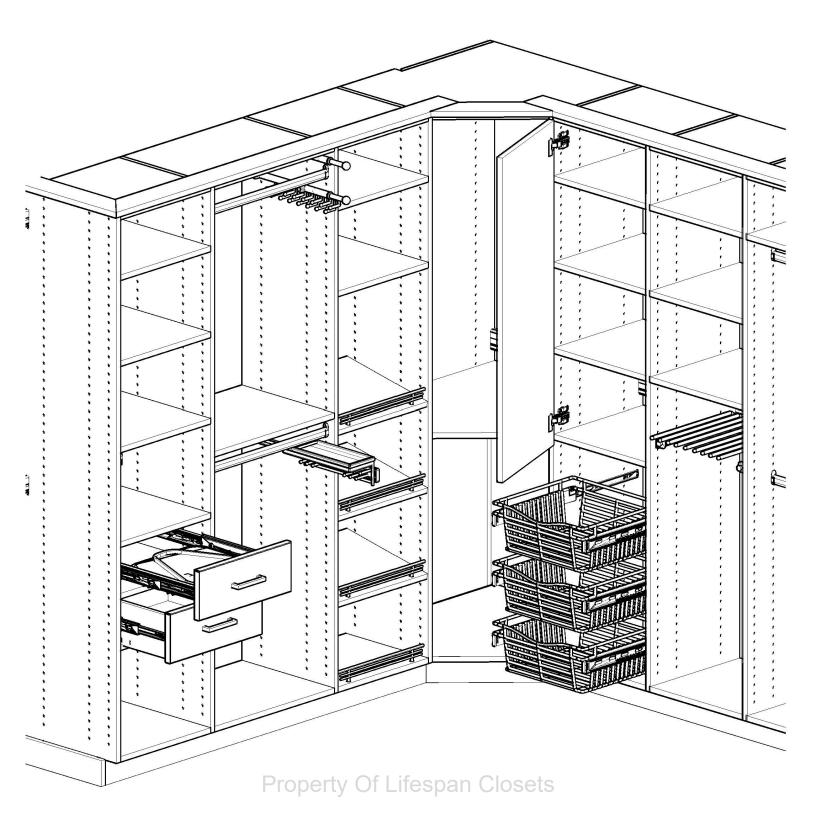



YOUR DESIGN

A copy of your design was sent with your order. Please go over the design and take inventory to make sure everything is right before starting installation. Below is a sample design to help you understand your design better.

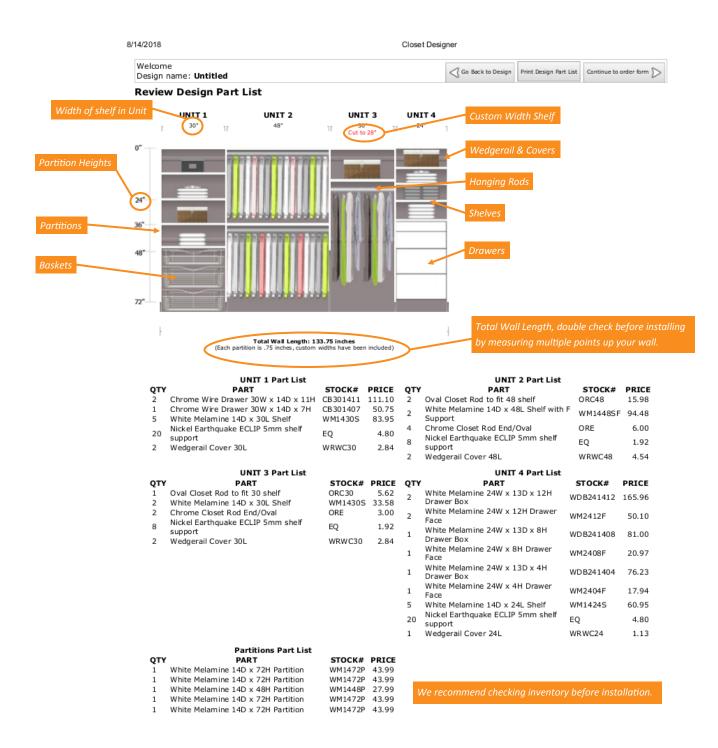

https://www.lifespanclosets.com/design-it/

1/2

Instructions are for informational purposes only. It is your responsibility to ensure proper installation.

RECOMMENDED TOOLS




HARDWARE







Property Of Lifespan Closets

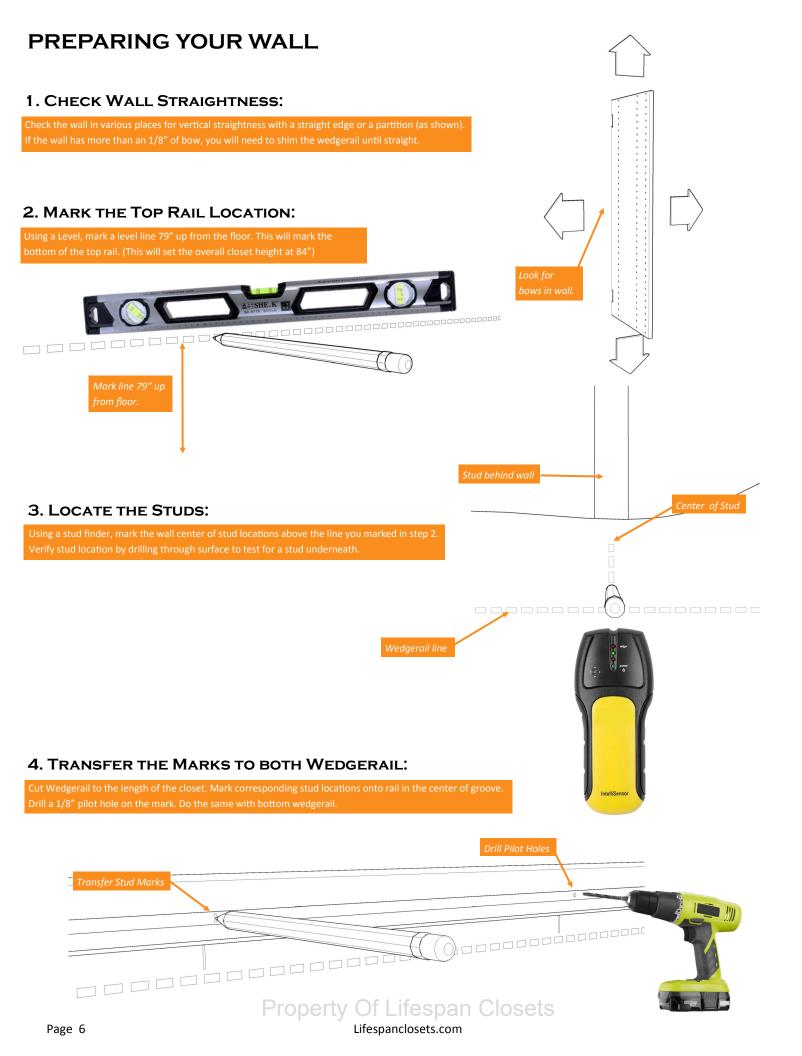

WEDGERAIL

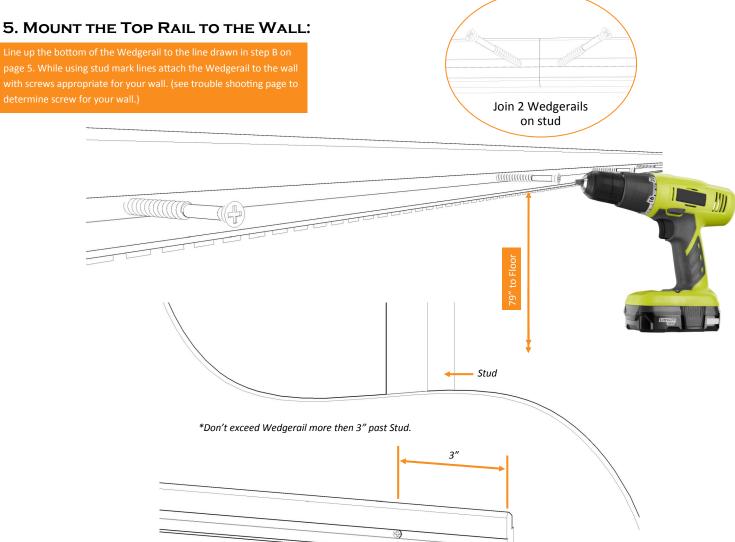

6. MOUNT THE BOTTOM RAIL TO THE WALL:

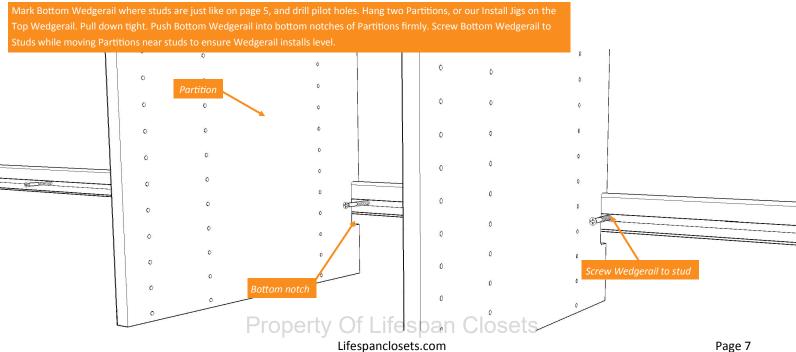



PARTITIONS


7. HANGING THE PARTITIONS:

*Note: If you have Back Panels do step 8a and 8b first before continuing.

f P Figure 2

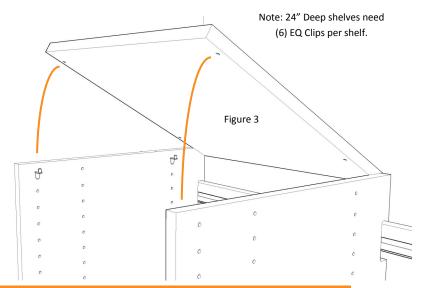

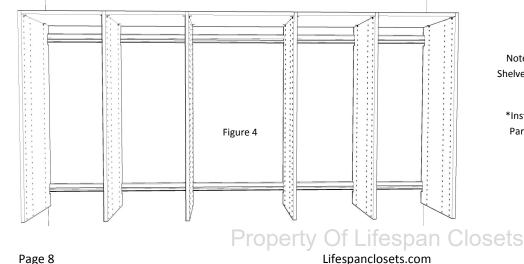


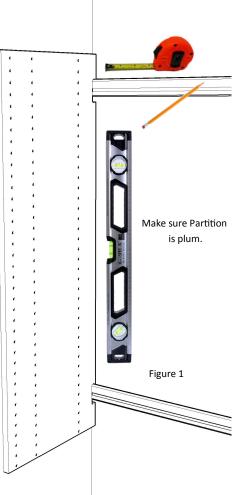

Note: With 84" & 96" Tall Partitions Braces, Bottom Shelves, Partition Feet*, and Toe-Kicks come with units. See pages 22,23, and 24 for instructions.

*Install Partition Feet before installing the Partition. Partition Feet come with 24" deep Partitions only.


BACK PANELS

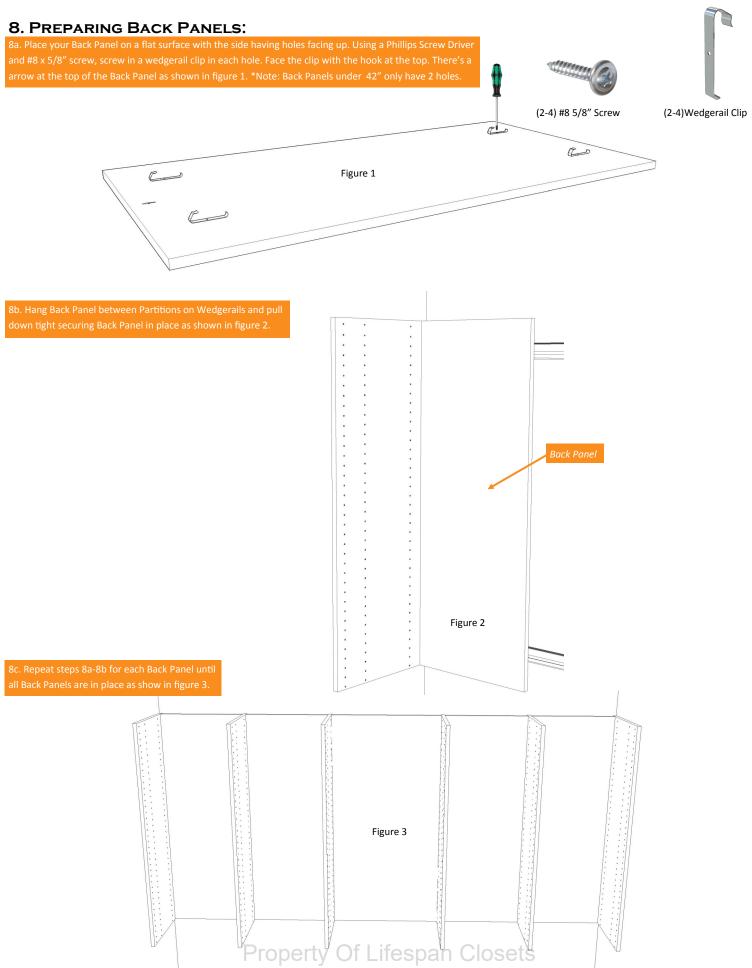

Lifespanclosets.com

WEDGERAIL COVERS



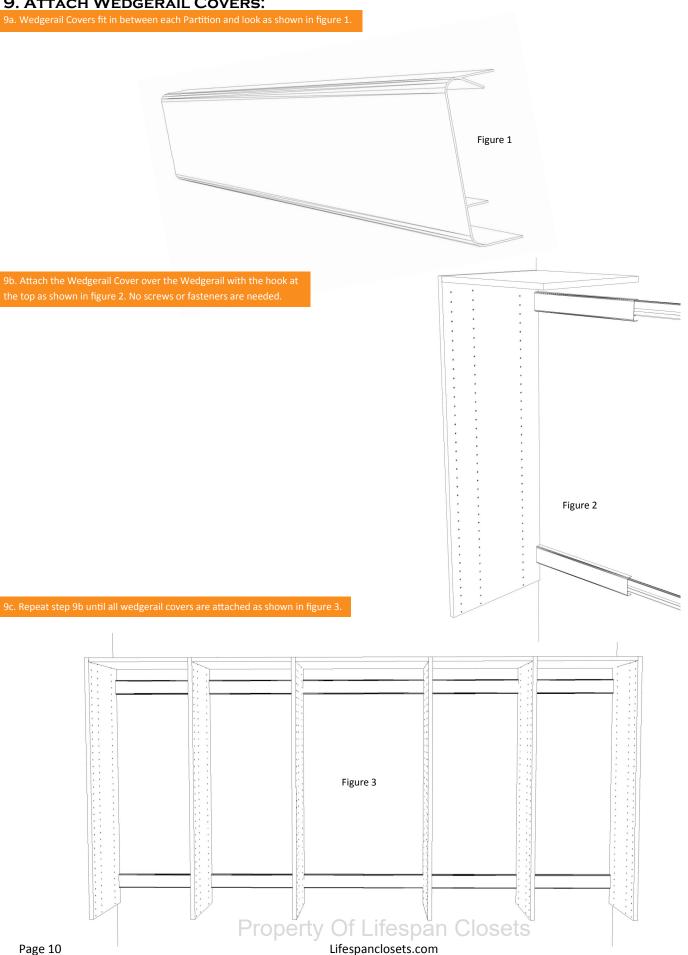


Page 10


F-RAIL & SHELVES

10. ATTACHING F-RAIL TO SHELF:

	*Note: Back of shelf has no edgeband.
Figure 1	

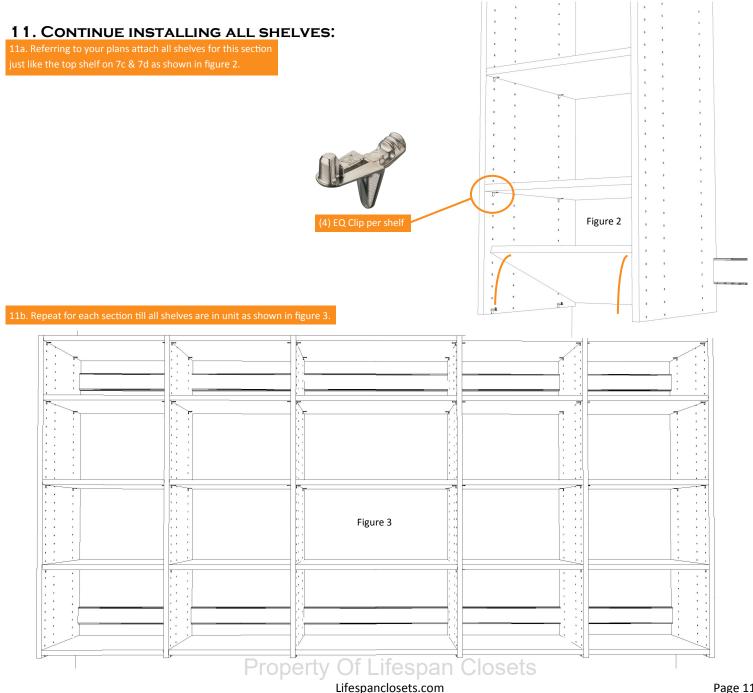


BRIDGE SHELVES & H-RAIL

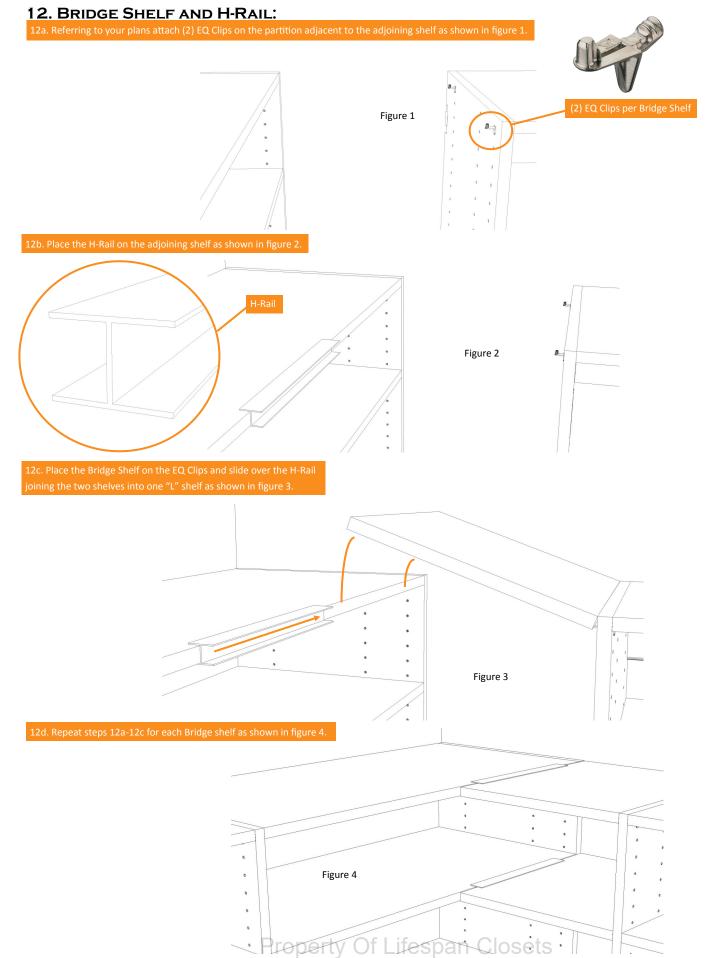


SHOE SHELVES & HANGING RODS

13. SHOE SHELVES:

13a Shoe Shelves install just like regular shelves. Shoe shelves can also be installed at a angle by lowering the front (2) EQ clips down two holes as shown in figure 1.

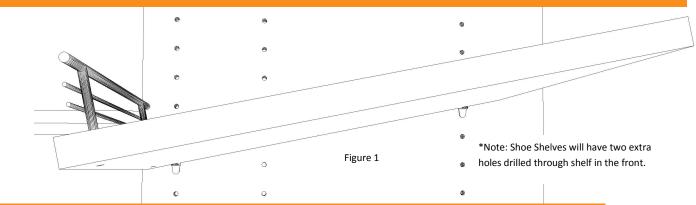


3b. Shoe Rails are sent not installed. To install shoe rails insert pegs into holes in the front of the shoe shelf pressing firmly as shown in figure 2.

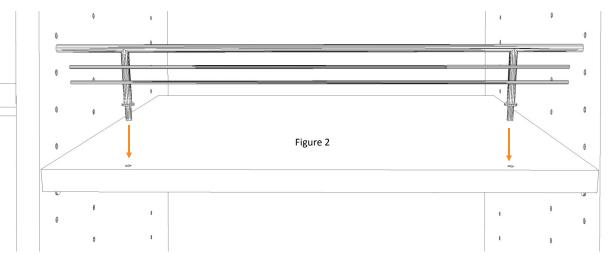


14. HANGING RODS:

14a. Hanging Rods have two parts the Rod and the Rod Ends. First install the Rod Ends into desired hole location as shown in figure 3.

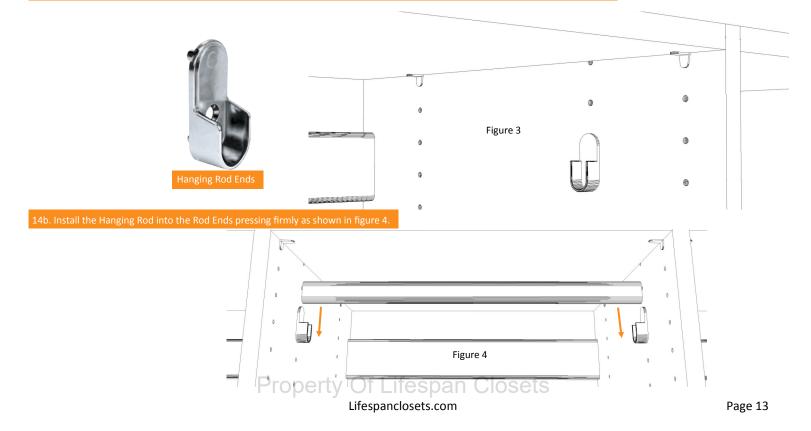

DRAWER ASSEMBLY & INSTALLATION


15. DRAWER SLIDES:

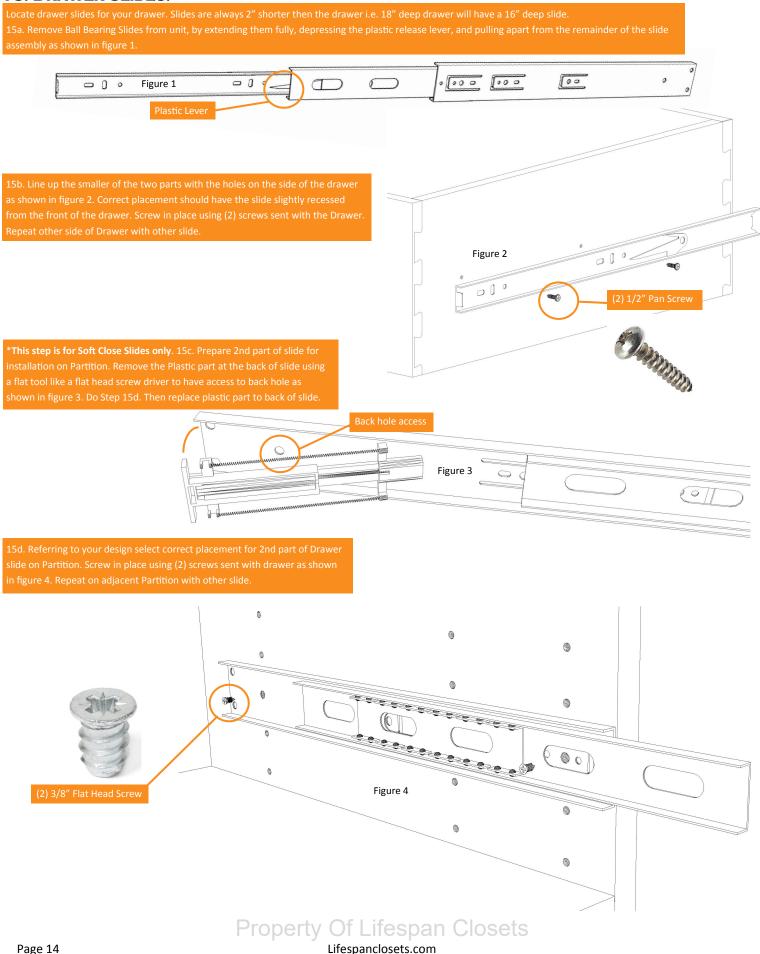

DRAWER ASSEMBLY & INSTALLATION

16. DRILL DRAWER FACE :


for your handle and carefully drill remaining material with a sharp 3/16" Drill Bit as shown in figure 1.

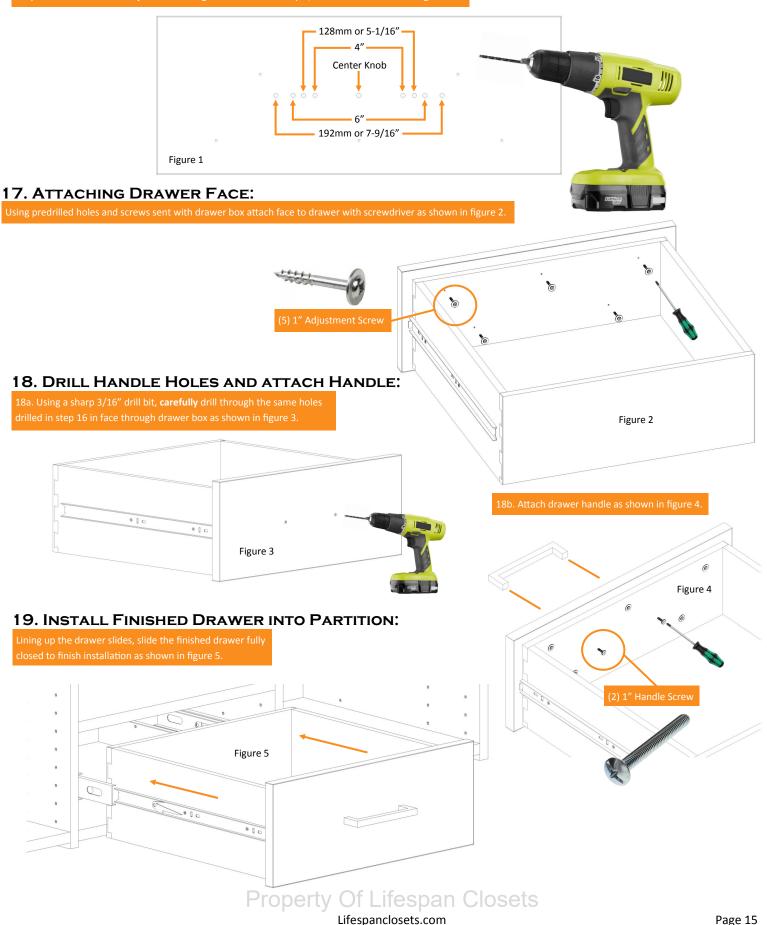



BASKETS


20. BASKET ASSEMBLY:

- 20a. Position ball bearing slide where desired in closet
- 20b. Align slide holes with Partition holes as shown in Figure 1 & 2. Using the screws sent with basket attach the slide to the Partition
- 20c. Position and install other slide.
- 20d. Place back wire of basket into hook on left and right slide as shown in Figure 3.
- 20e. Pivot the basket down so that the tabs on the basket are inserted into the slots in the slides as show in Figure 4.

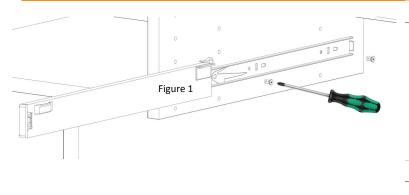

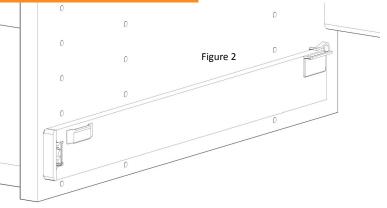

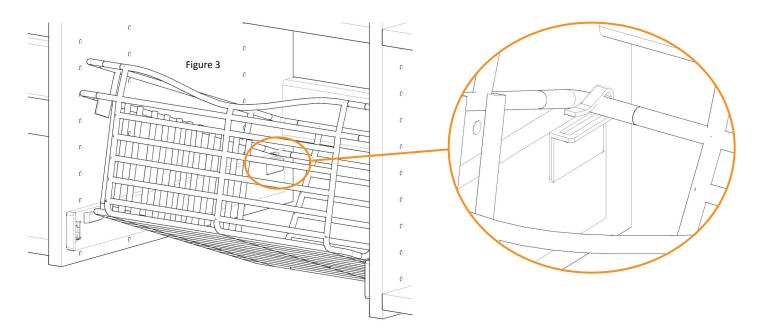

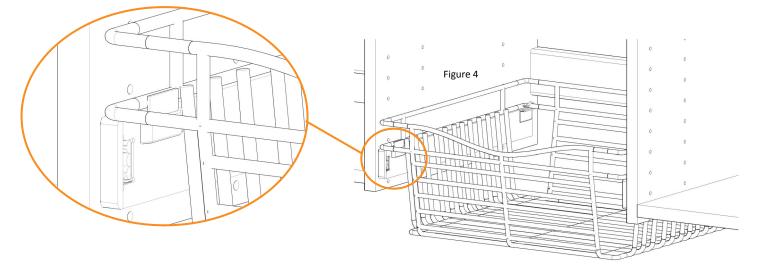


Property Of Lifespan Closets

Lifespanclosets.com

PANT RACK

21. PANT RACK INSTALLATION:

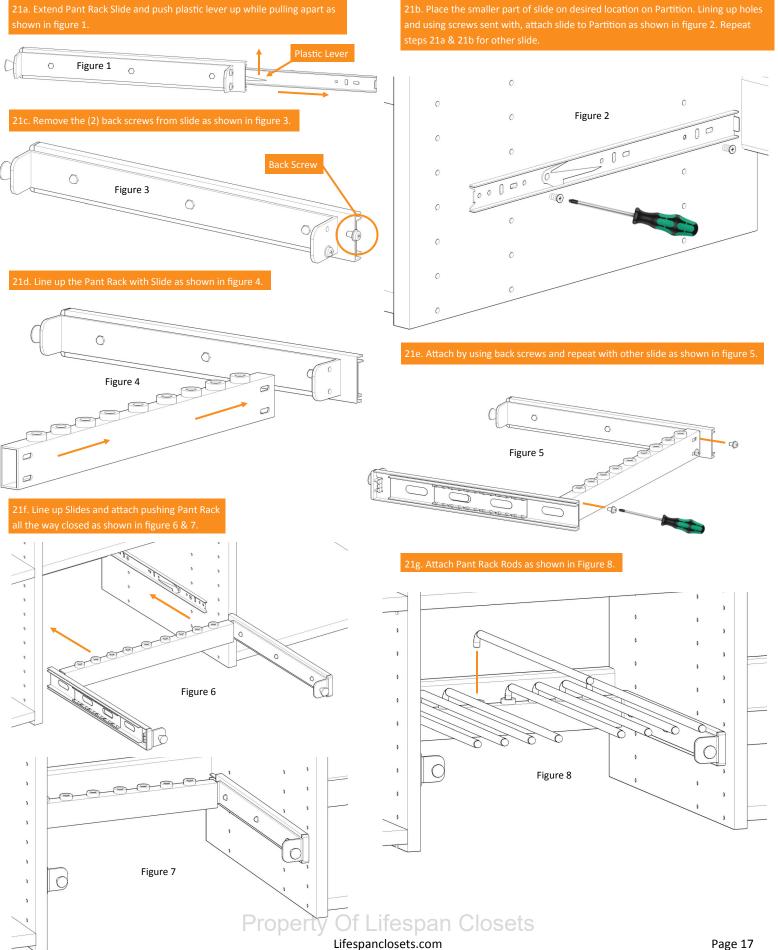


IRONING BOARD

22. IRONING BOARD INSTALLATION:


22a. Separate inner slide from outer slide, by extending them fully, depressing the plastic release lever, and pulling apart from the remainder of the slide assembly as shown in figure 1.

22b. Attach the Ball Bearing part of the slide to the desired location on the partition as your design shows using the screws sent with the Ironing Board as shown in figure 2.

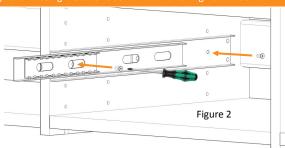


22c. Using the 5mm Allen wrench, and 10mm wrench, remove the board and front support from the friction slide units as shown in figure 3.


Figure 1

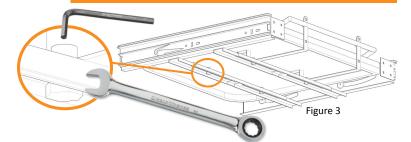


22d. Once the ironing board, and front support is remove Re-assemble the slides as shown in figure 4.

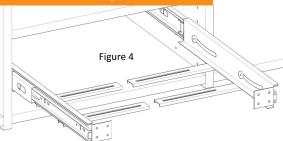

22f. Attach Drawer Handle to Drawer Face using the pre-drilled pilot holes as shown in figure 6.

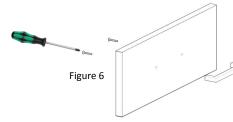


22h. You can now carefully pull on the Drawer Handle to open the Drawer "Slightly" to have access to screw in the Drawer Face. Using (8) provided #8 flathead screws, screw in the face to the slides as shown in figure 8.

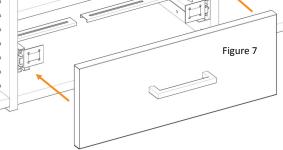

22i. With Drawer front attached re-install the board, support brac mechanism into the drawer being sure to have the front wire sup in place on the drawer front by the support brackets as shown in 22j. Use (4) #8 flathead screws to attach the support bracket to the drawer front as shown in figure 10.

Figure 5

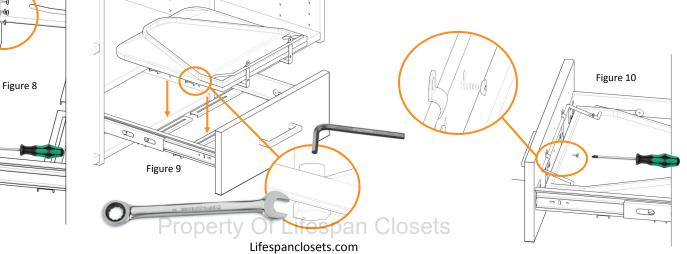


Page 18


1172

000


ACCESSORIES


23. CBSR-14, CTR-14, AND CVR-14

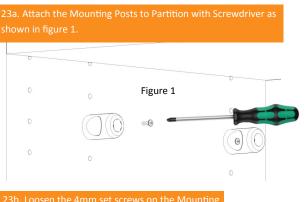


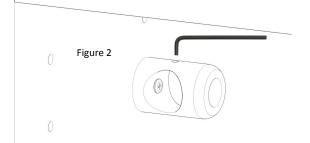

24. TBC-14TCR, TRC-14, AND BRC-14

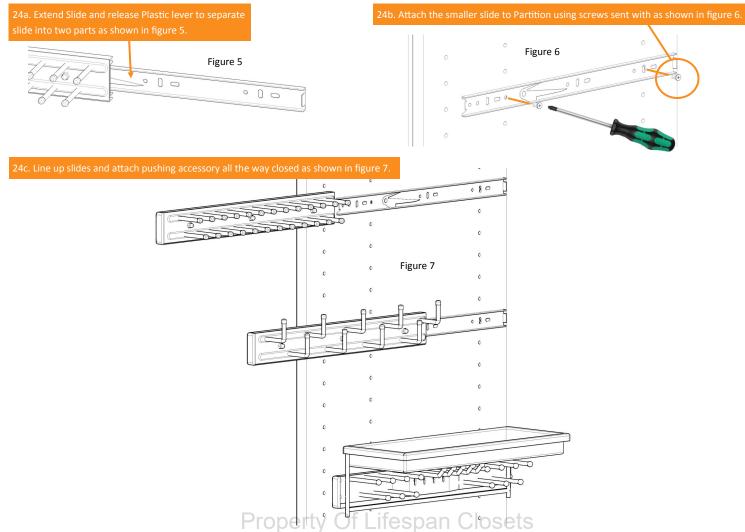

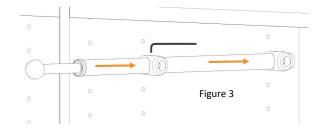


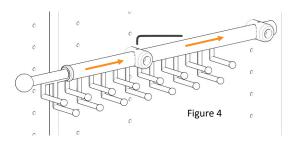


DOORS

25. DOOR ASSEMBLY:

25a. Laying the Door on a flat surface and with the flap up, push the door hinges into the holes as shown in figure 1.

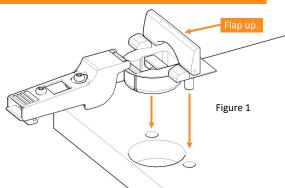


25c. Line up Door with Hinges attached to Partition to locate holes where Inserta Plates will be installed as shown in figure 3

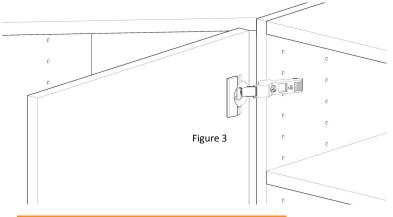


25e. Fold flaps down to secure Inserta Plate to Partition as sown in figure 5. Repeat for other Inserta Plate.

0


C

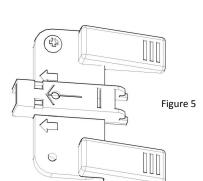


5b. Push Flap down to secure Door Hinges to Door as shown in figure 2.

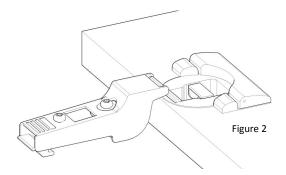


25d. Push Inserta Plate into holes located in step 25c. with flaps up and arrows facing front of unit as shown in figure 4.

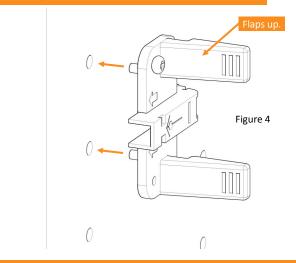

25f. Attach Door by sliding Door Hinges into groove of the Inserta Plate and Push down on Hinge to snap in place as shown in figure 6.

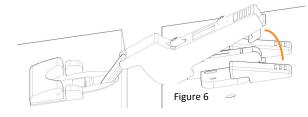

25g. Adjust screws for best fit of Door as shown in figure 7.

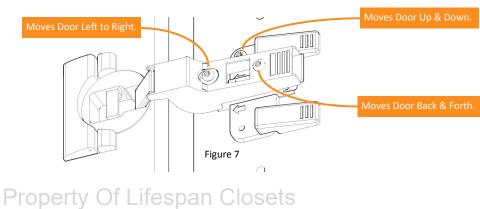

Lifespanclosets.com

CORNER UNITS


26. INSTALL WEDGERAIL:

Referring to your Design do steps 1-6 on



Figure 1

*Note: Walls must be 90° angle. Shim Wedgerail to adjust.

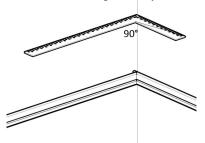

27. INSTALL PARTITIONS:


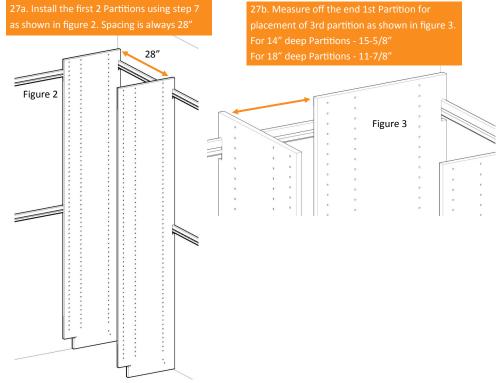


Figure 5

28. INSTALL SHELVES:

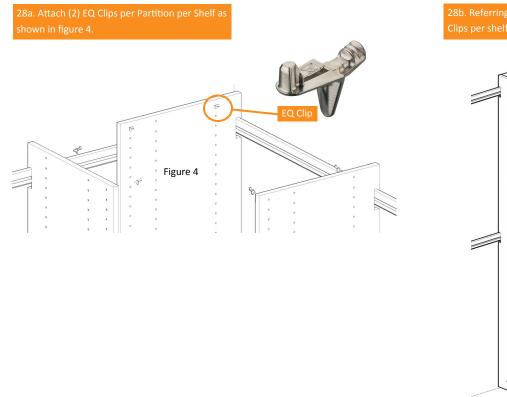


Property Of Lifespan Closets


Lifespanclosets.com

BRACES


29. BRACE INSTALLATION:

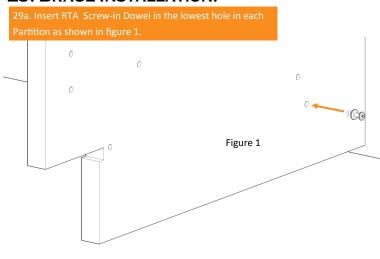

29b. Insert 19mm Outrigger to both ends of Brace as shown in figure 2.

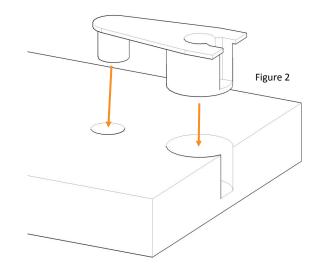

29c. Slide Brace under and then up into RTA Screw Dowel as shown in figure 3.

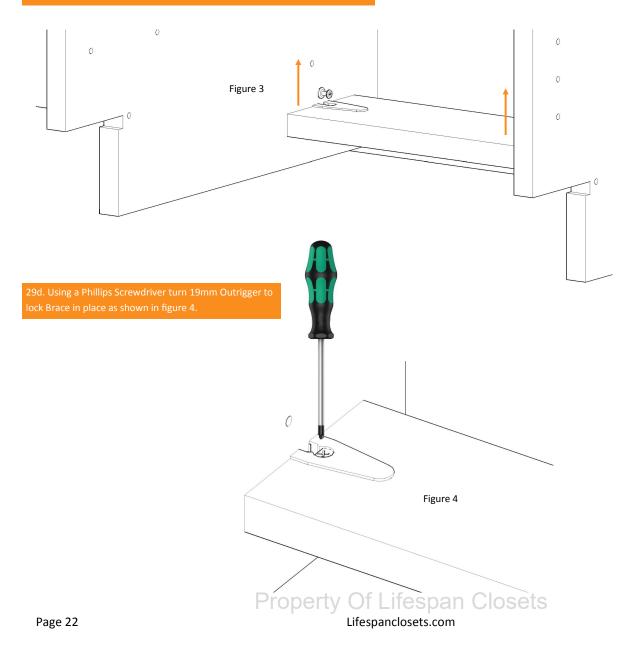


BOTTOM SHELVES & PARTITION FEET


30. BOTTOM SHELF INSTALLATION:

Bottom shelves will have a different hole pattern than standard shelves. Use (4) EQ Clips in the Bottom hole location as shown in figure 1. Install shelf over EQ Clips as shown in figure 2.

31. PARTITION FEET INSTALLATION:

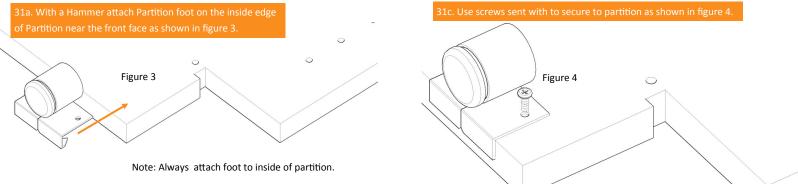

31d. Follow step 7 for installing Partition and then adjust Partition foot by turning round plastic at base of the foot to level Partition as shown in figure 5.

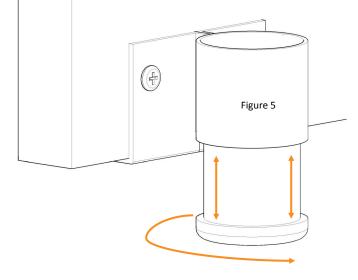


Note: Partition Feet only come with 24" deep Partitions.




TOE-KICK



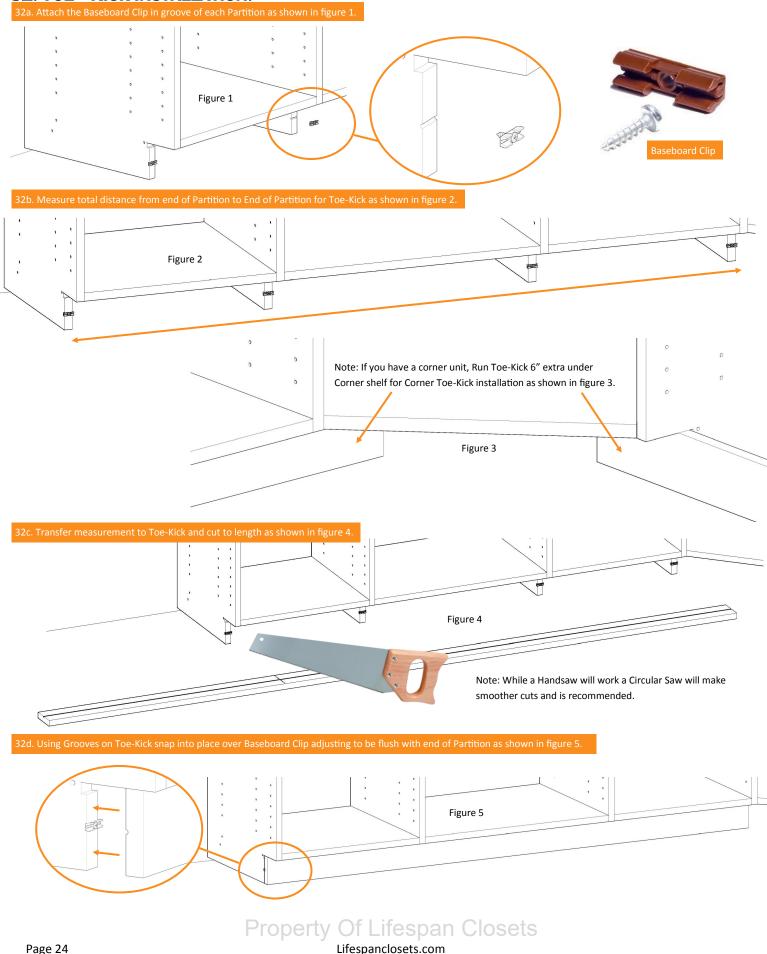


TOE-KICKS

33. TOE -KICK SIDE INSTALLATION:

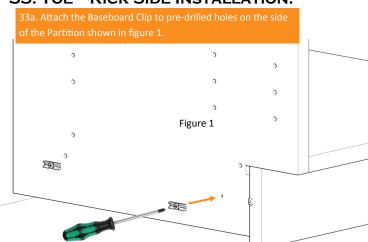


34. TOE -KICK CORNER INSTALLATION:


34a. Place corner shelf on a flat surface, Screw in the (3)RTA Dowels into the bottom front holes as shown in figure 3.

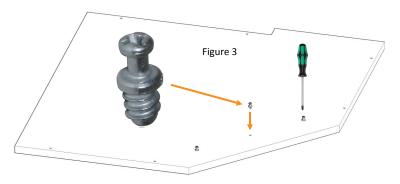


33b. Side Toe-Kicks come cut to length and ready to install. Using Grooves on Side Toe-Kick snap into place over Baseboard Clip adjusting to be flush with end of front Toe-Kick as shown in figure 2.

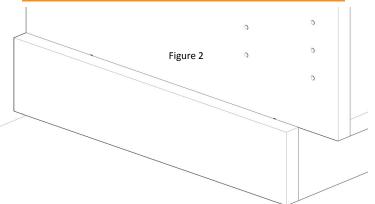

34b. Attach the (3)19mm Outriggers to the pre-cut Corner Toe-Kick as shown in figure 4.

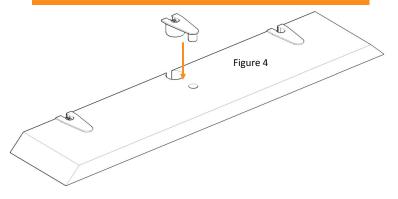


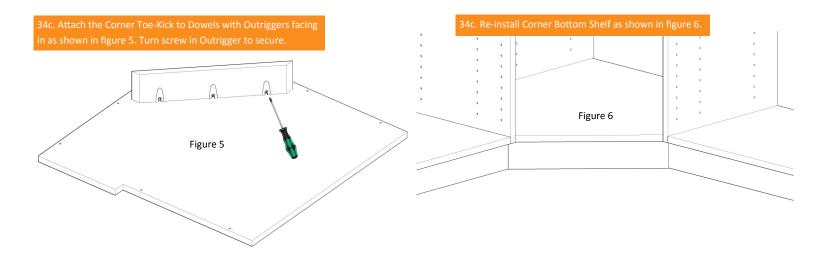

TOP MOLDING


35. Top Molding Installation:

35a. Refer to your Design and measure desired length of each Top Molding as shown in the 3 typical designs

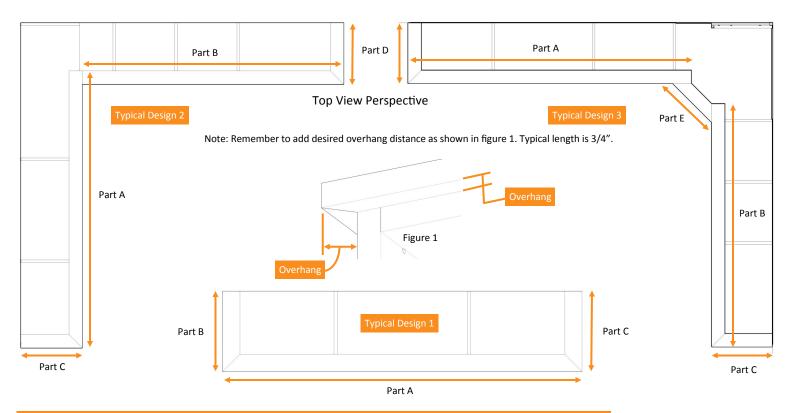

35b. Top molding comes in 8', and 4' sizes and is edgebanded on one side. Cut each Part with Hand saw or recommended Circular Saw.


35c. Attach Top Molding with 1-1/4" screw every 12" using the pre-drilled holes as shown in figure 2.

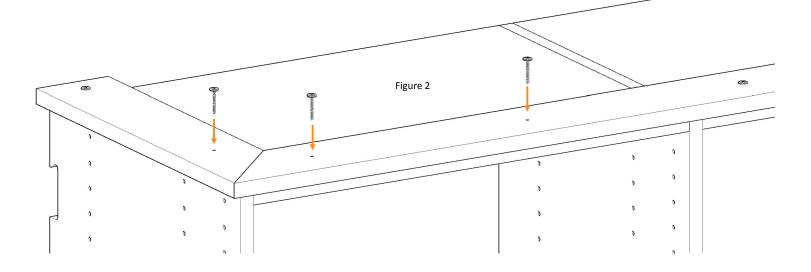




TROUBLE SHOOTING

PICKING THE RIGHT SCREW FOR YOUR WEDGERAIL:

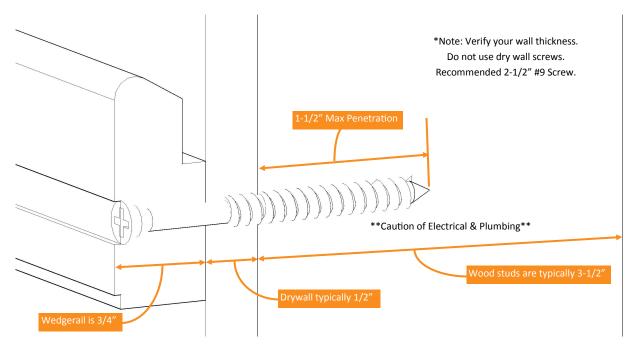

How to Shim your Wedgerail:

A. Using a straight edge like a Partition or long Level tool, run it along the wall until you see a gap between straight edge and wall. Loosen the screws in wedgerail around that location and insert two shims as shown in figure 1. Position Shims on top of each other behind wedgerail so wedgerail is lifted equally from top to bottom as shown in figure 2. Hammer shims in equally until face of wedgerail is level and then snap shims off and re-screw wedgerail in as shown in figure 3.

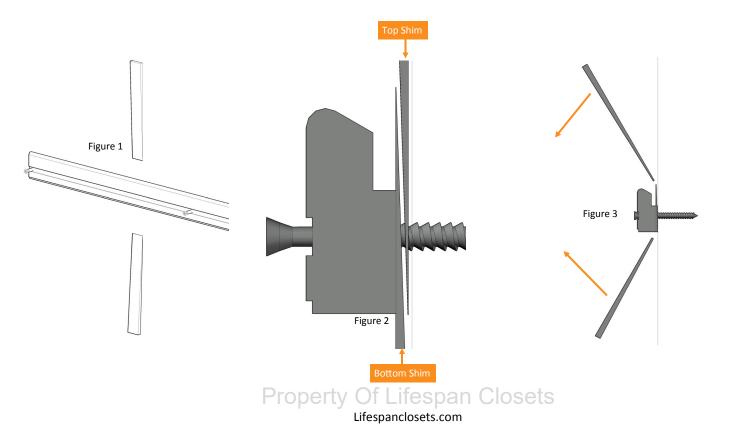

WARRANTY

Limited Lifetime Warranty

Our limited warranty covers defect in materials provided that the Lifespan Closet issued for normal, everyday use. We are committed to bringing you products of the highest quality and value. Even though a Lifespan Closet is of superior quality, this limited warranty applies only if the Lifespan Closet has been properly installed, used, and maintained. The terms and conditions of our limited warranty are set forth below.

Your Warranty.

Your Lifespan Closets[™] product is warranted to be free from defects in manufacturing, materials, and workmanship. If any such defect appears during the term of this warranty, Lifespan Closets[™] will, at its option (1) repair the defective product, (2) replace the defective materials, or (3) refund your purchase price. If the replacement option is elected, Lifespan Closets[™] will not be responsible for the installation or refinishing of replacement parts.

Conditions and Exclusions.

Lifespan Closets[™] builds its Lifespan Closets[™] to be durable and long-lasting. There are certain conditions or applications, however, over which Lifespan Closets[™] has no control. Defects or problems as a result of such conditions or applications are not the responsibility of Lifespan Closets[™]. They include:

- Improper installation, field finishing, or maintenance.
- Normal wear of component parts or the discoloration of finishes.
- Any misuse, modification, or alteration.
- Variations in the color and grain of natural wood part.

YOUR EXCLUSIVE REMEDY WITH RESPECT TO ANY AND ALL LOSSES OR DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER SHALL BE AS SPECIFIED ABOVE.

WE SHALL IN NO EVENT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OF ANY KIND, HOWEVER OCCASIONED, WHETHER BY NEGLIGENCE OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN.

THE FOREGOING LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND NO PERSON (INCLUDING ANY EMPLOYEE, AGENT, DEALER, OR REPRESENTATIVE) IS AUTHORIZED TO MAKE ANY REPRESENTATION OR WARRANTY CONCERNING THIS PRODUCT, EXCEPT TO REFER PURCHASERS TO THIS WARRANTY. THIS WARRANTY IS NOT A WARRANTY OF FUTURE PERFORMANCE BUT ONLY A WARRANTY TO REPAIR, REPLACE, OR REFUND.

If you have a warranty claim:

If you have a warranty claim with your Lifespan Closet, call the dealer or distributor from whom the Lifespan Closets™ was purchased.

If you do not know the name of the dealer or distributor, or if you have not received a response from the dealer or distributor within ten (10) business days, please submit a written complaint to:

Lifespan Closets™ | 215 S. 37th Ave W | Duluth, MN 55807



215 South 37th Avenue West Duluth, MN 55807 1-866-961-0004 www.lifespanclosets.com